 




4 metre high portable flag ideal for indoor or outdoor events, promotions or exhibitions.

features & benefits

- Max Flag size 2800mm x 800mm approx
- Overall height 4150mm max approx
- Unique design allows the flag to rotate when the wind direction changes
- Quick assembly
- Hollow moulded base suitable for water or sand weighting for total stability
- Telescopic pole allows the flag to be set at two fixed heights
- Optional carry bags available

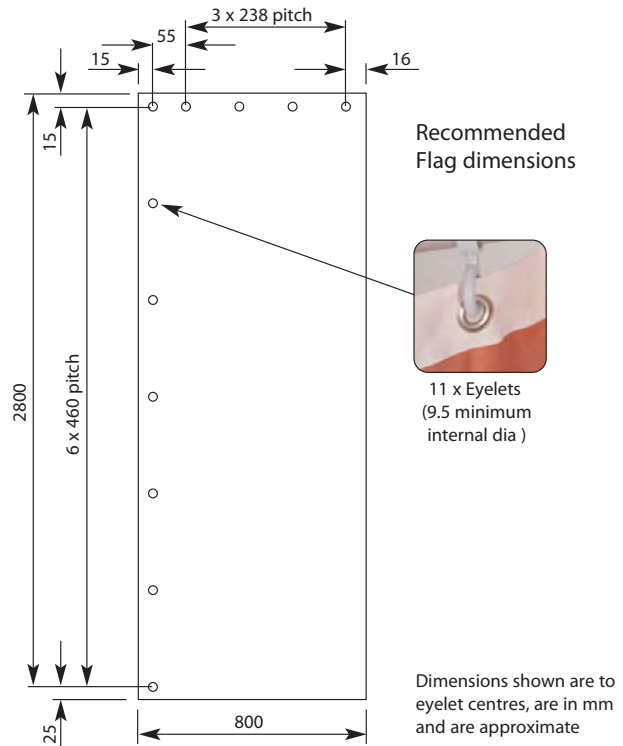

hardware specifications	graphic specifications	additional information
Overall assembled dimensions: Maximum height 4150mm (h) x 630mm (dia) approx Minimum height 2900mm (h) x 630mm (dia) approx Weights: 8kg approx empty and 52kg approx when filled with water Capacity of base: 44 litres of water approx	Recommended substrate: Lightweight flag textile Do not use banner vinyl Recommended print process: Dye-sublimation print onto one side of the flag only Maximum flag size: 2800mm (h) x 800mm (w) Minimum flag size: 1500mm (h) x 800mm (w)	Giant pole 4m flags are designed to withstand approximate windspeeds of 13 to 18 miles per hour (Beaufort Scale 4) Recommended Carry bags: AB212-C

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE.

Assembly Instructions



Kit includes: 1 top pole & screw, 1 telescopic pole, 7 large rings, 4 small rings, 1 pole stay set, 1 pole stopper, 1 pole clamp and 1 moulded base.



1 Attach the pole stay set to the moulded base, placing each stay through the corresponding hole on the base.



2 Secure the stays to the base by slotting the locking pin over the stay.



 
3 Slide the telescopic pole through the hole in the pole stay set.




4 Slide the pole clamp over the telescopic pole and seat the pole into the base.



5 Position the clamp near to the top of the stay set and tighten the thumbwheel to secure.

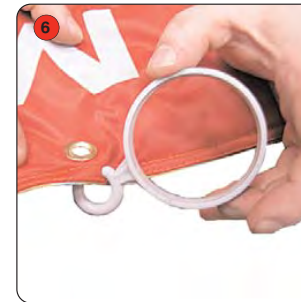

6 Attach 7 large rings to the eyelets on the longer side of the flag and 4 small rings to the shorter side.

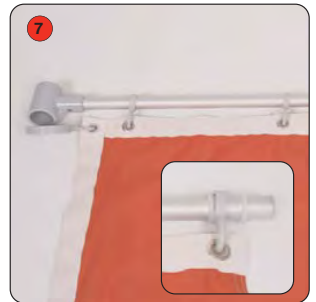 

7 Slide the small rings onto the top pole, ensure the rubber rings secure the end ring in place.



8 Place the larger rings over the telescopic pole.



9 Attach top pole to the telescopic pole and tighten screw to secure.



10 Extend the telescopic poles to the desired flag height, ensure that each button locator clicks into position.



11 To prevent the large rings lifting up during use fit the pole stopper above the bottom ring.



12 Remove the bung from the moulded base and fill with water or sand to provide stability.

