



1. Assemble Masts.
Insert them in the baseplate making sure the keyhole is at top.

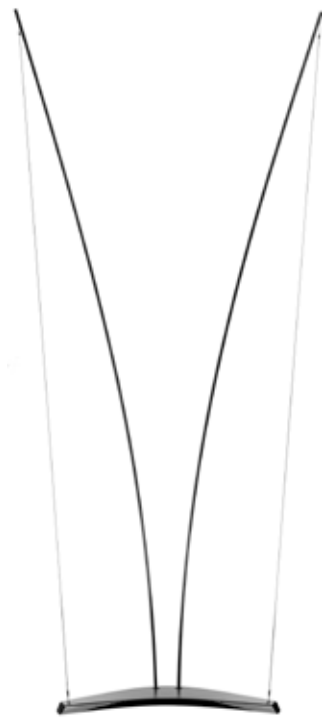


2. Tension Masts.
Pull mast forward and insert cable into keyhole. Slide hand down cable and hook cable end into base plate.

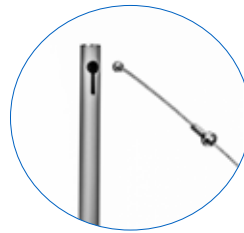

3. Attach Banner
Carefully unfurl your banner holding it in one hand, hook it on to the first cable.



4. Attach Banner
Holding the second cable, hook the banner on to the second fixing so they both look like the above detail.

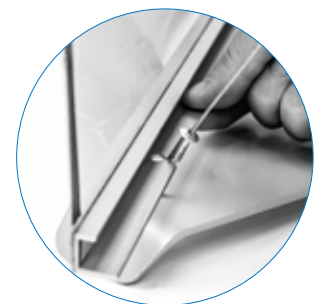

5. Secure Banner
The clever bit.....pull the cable back so the banner drops down. Now guide the bottom fixing into the keyhole. Let the cable go so the banner rides up the fixing. Its now secure and can't come off.

