


Instruction of Straight SEG Frame Hardware



1 Take the Components out of the Bag



2 Pop the frame up

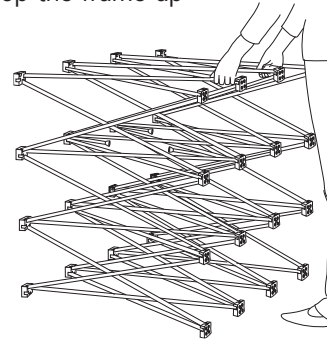

3 Connect all the Locking arms securely




4 Click the 4 Side bars into place




5 Assemble the Magnetic Bars


Pay attention:
Hold the Magbars at Top
and Bottom when fitting
and removing

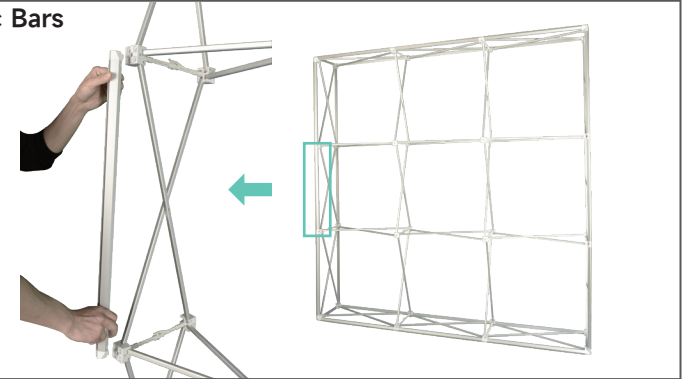


Option 1 Clip the LED Holder Mouldings onto the Frame (Top and Bottom)

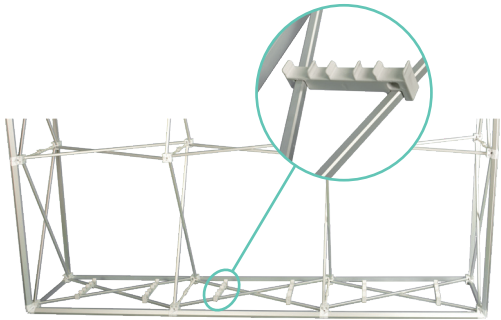


Option 2 Fit the LED Light Strips into the LED Holder Mouldings securely and connect the cables

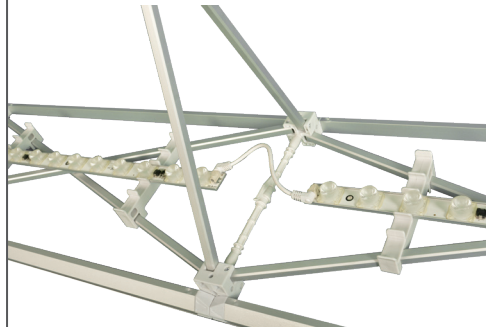

Option 3 Clip into the wire holder

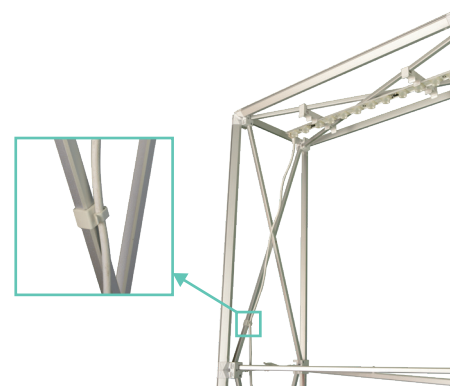

Option 4 Connect the adapter and plug into the power

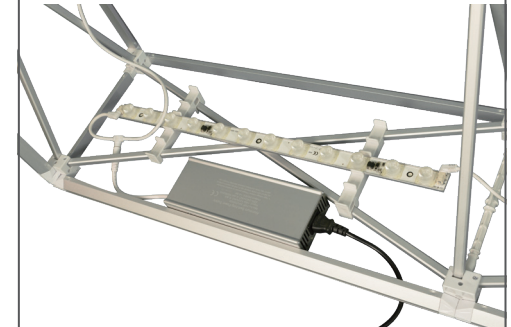

Graphic Application - when applying the graphics, for ease of fitting and to ensure the best fit, fit each corner first followed by the middle of each side, then push fit the remaining edges into place