



Step two

1. Insert ① into ②. Screw the screw hole on ① with ③ to fix ① on ②.
2. Insert ④ (Cable) into ⑤, upward the screw thread of ⑤. Clamp Aluminum Ferrule to hold ④.
3. Screw ⑥ into ⑤. Insert ⑥ into ①. Rotate ⑥ by clockwise to fix it on ①.
4. Insert cable into ⑧, screw hex screw on ⑧ to hold it on cable.
5. Insert ⑦ (frame) into ⑧, screw ⑨ (Hex Screw) to hold ⑦ (frame).

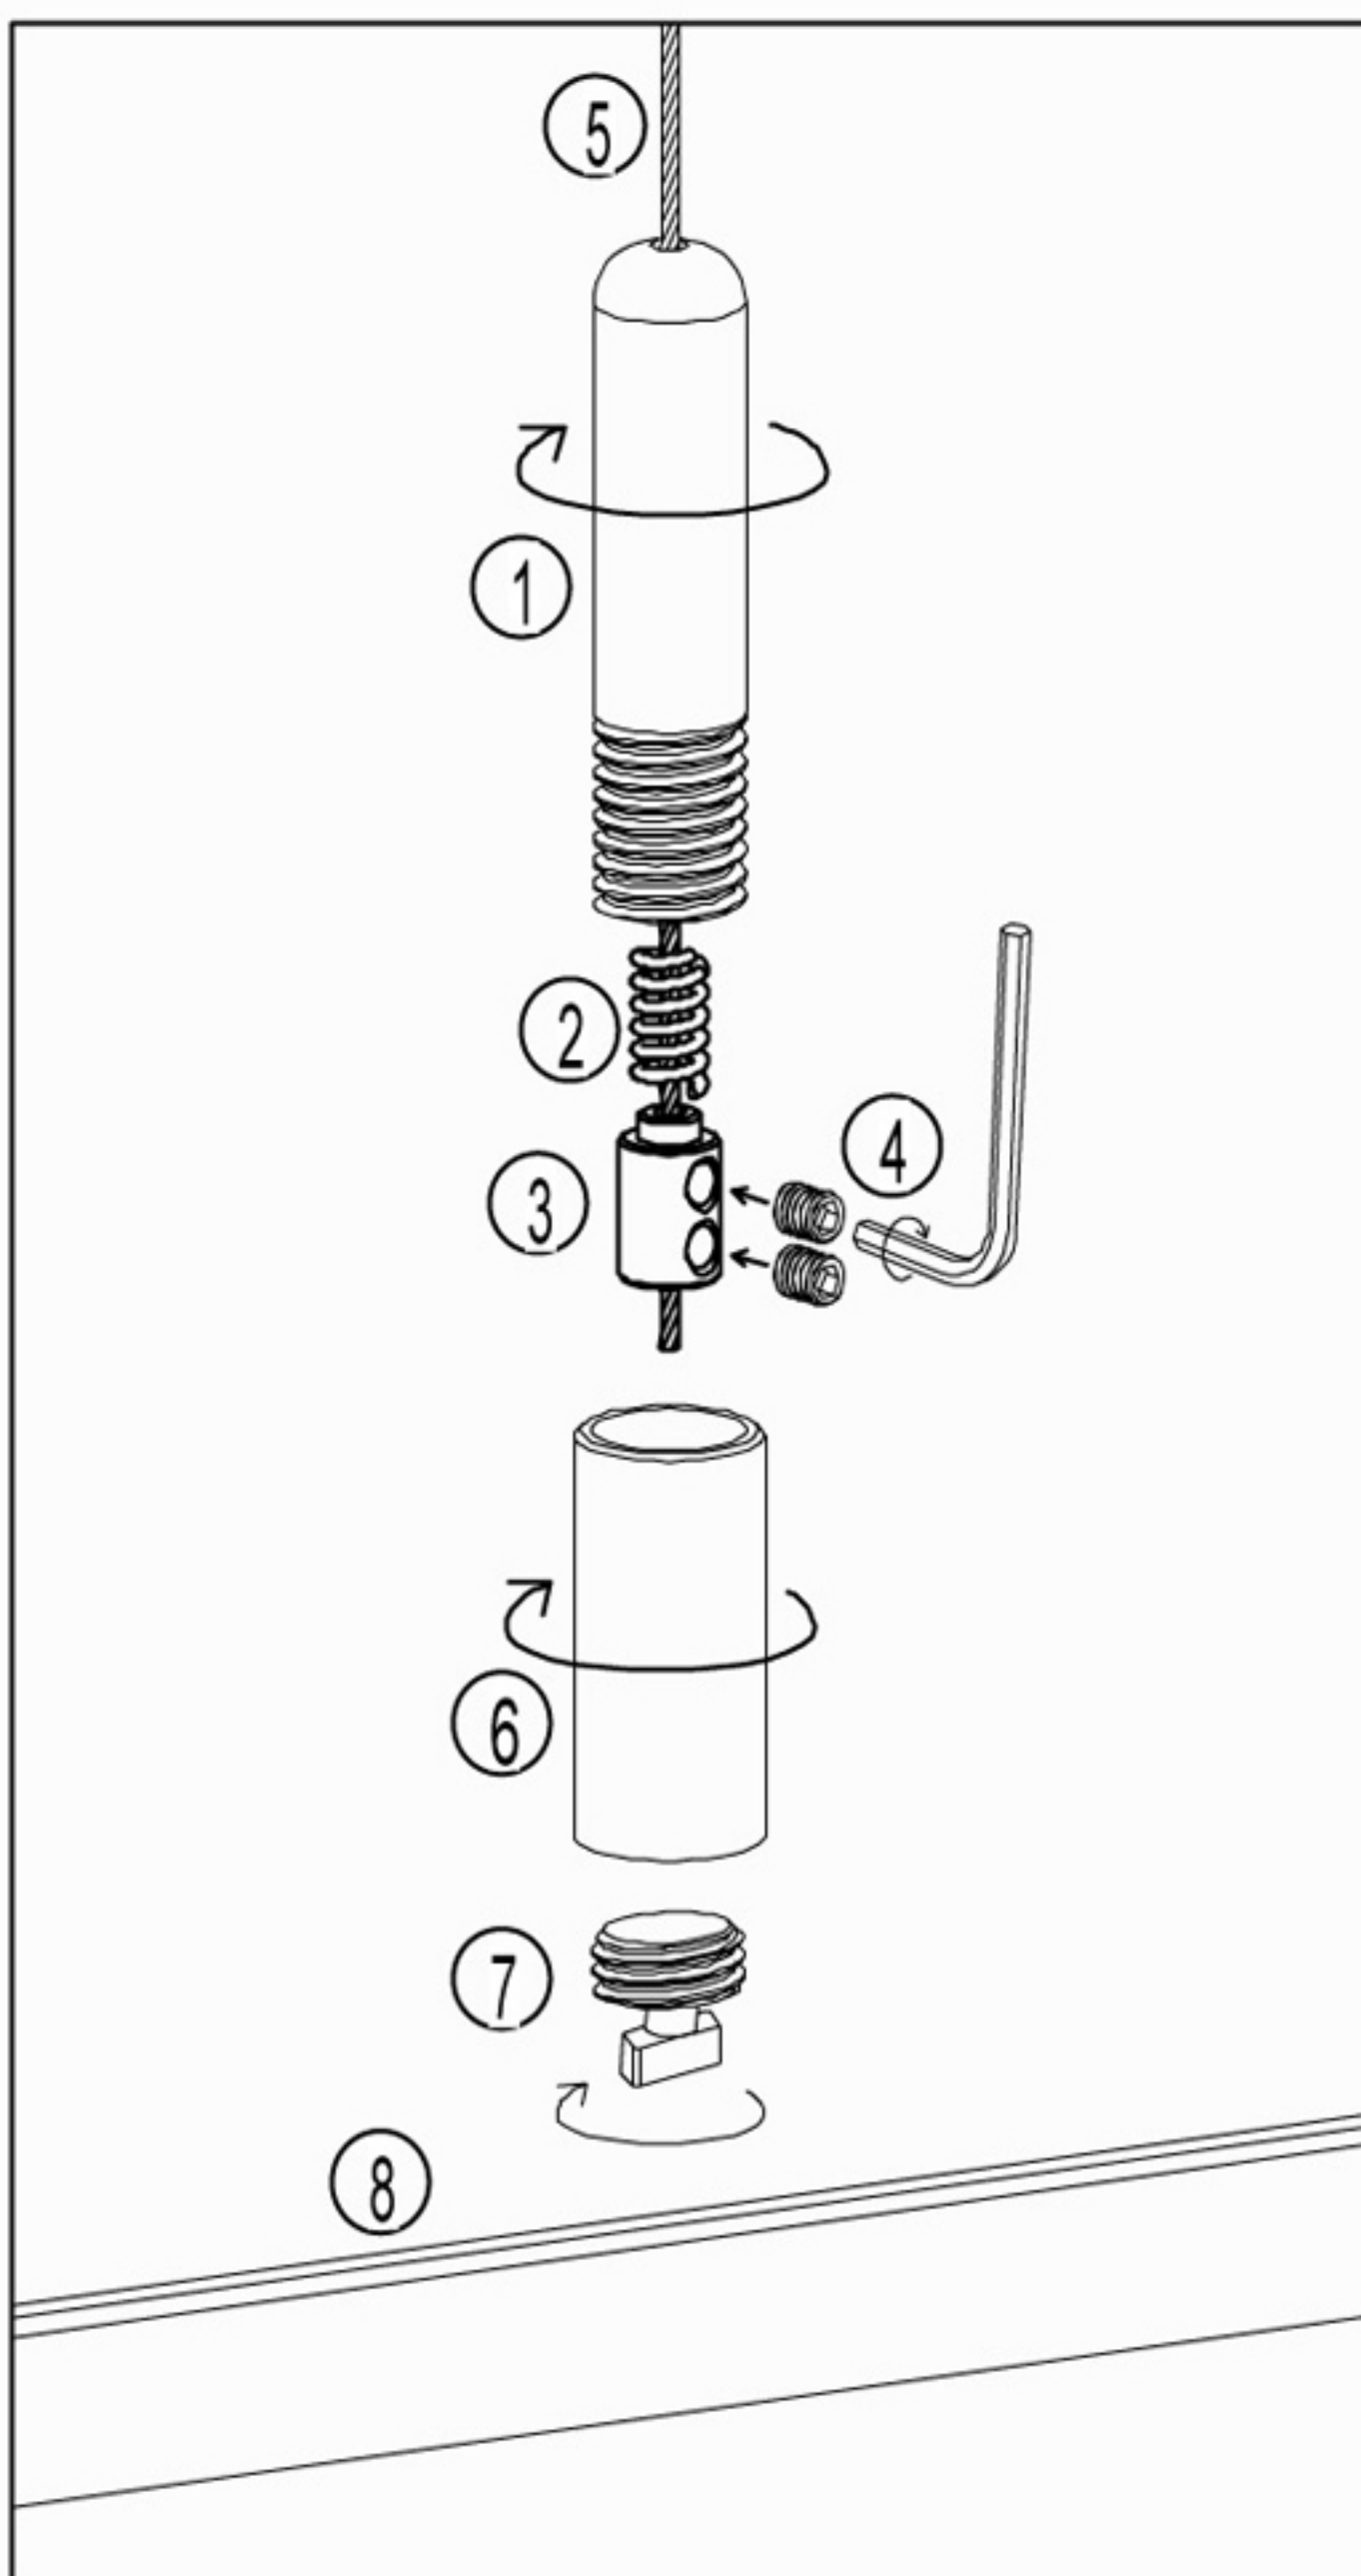

Step three

1. Insert the cable into ①, ②, ③, downward the screw thread of ①.
2. Screw ④ (Hex Screw) to fix ③ on the cable.
3. Screw ①, ⑦ into ⑥. Rotate ⑦ by clockwise to fix it on ⑧.

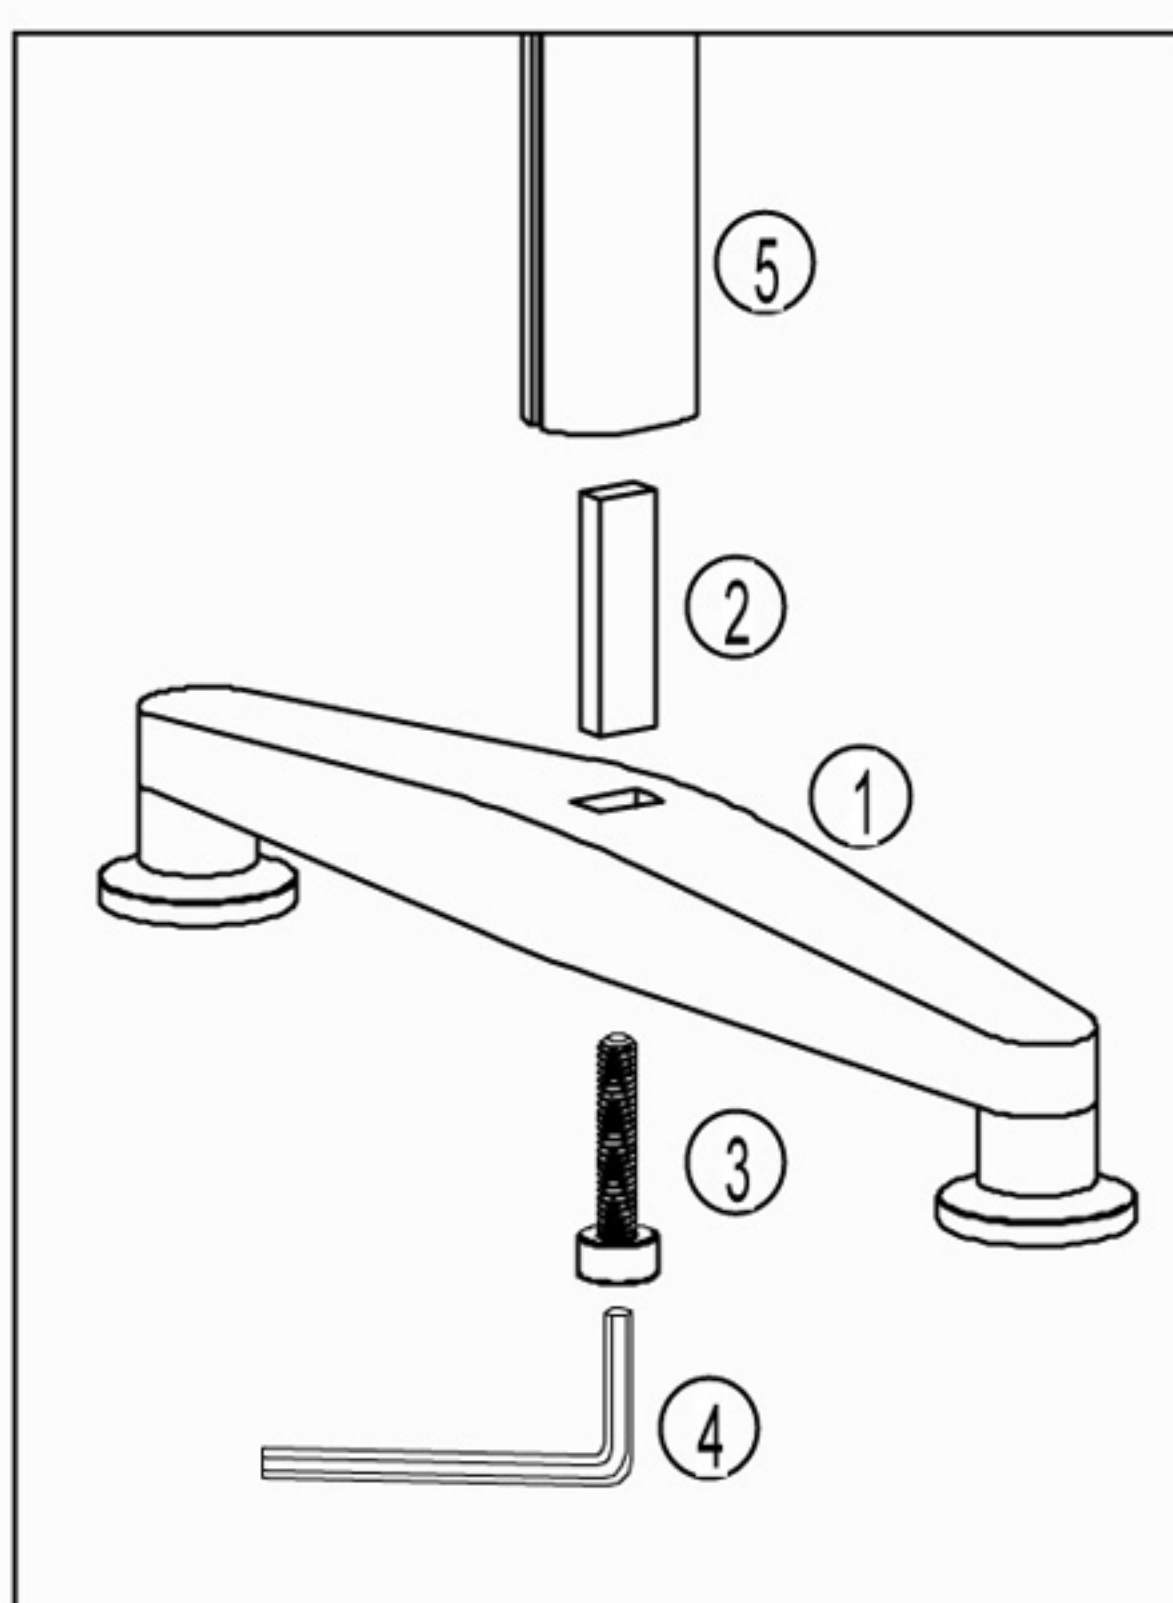

Step one

1. Screw ④ (Four Screws) to fix ① on ② on ③
2. Insert ⑤ into ②

