

Headliner Installation & Operation

For Poster Loading from the Bottom

1. Mark the desired position of the Headliner top edge with tape.

Note: Headliners are supplied in various sizes with either round or square corners. This installation is typical for any variation.




2. Clean, then degrease the window with the wipe supplied.

3. Rest the Headliner on a flat surface & peel away the tape protective strips.




4. Line up the top of the Headliner with the tape & carefully stick it to the window.

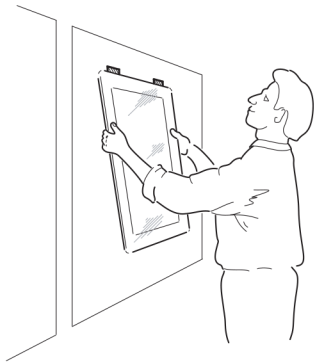

5. Press firmly along the edges of the Headliner all round to ensure good adhesion to the window.



6. To change the poster, open the Headliner from the bottom.

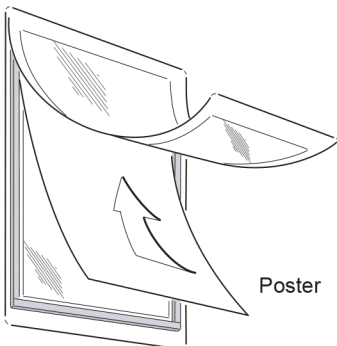

DiscountDisplays