

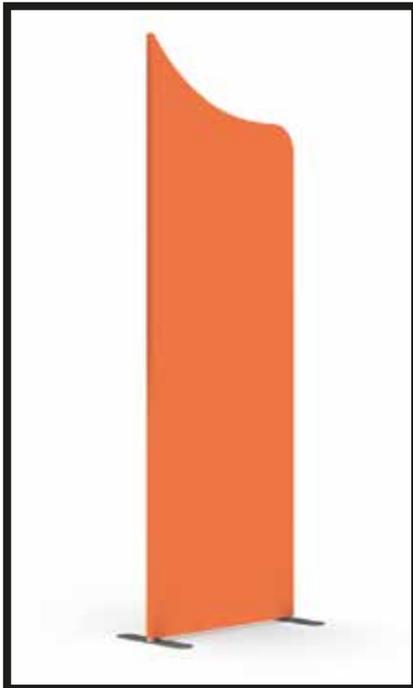
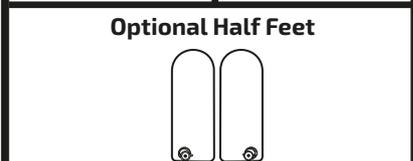
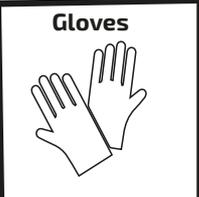
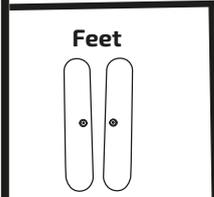

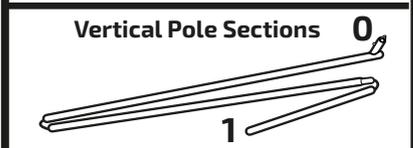


Modulate 824 (Slope 1)




Aug 2018

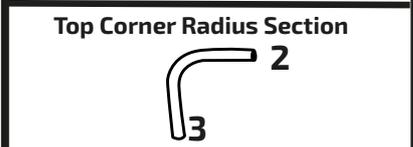

PARTS (NOT TO SCALE)


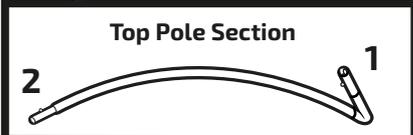


NOT SUPPLIED WITH KIT AND THEY ARE SOLD SEPARATELY

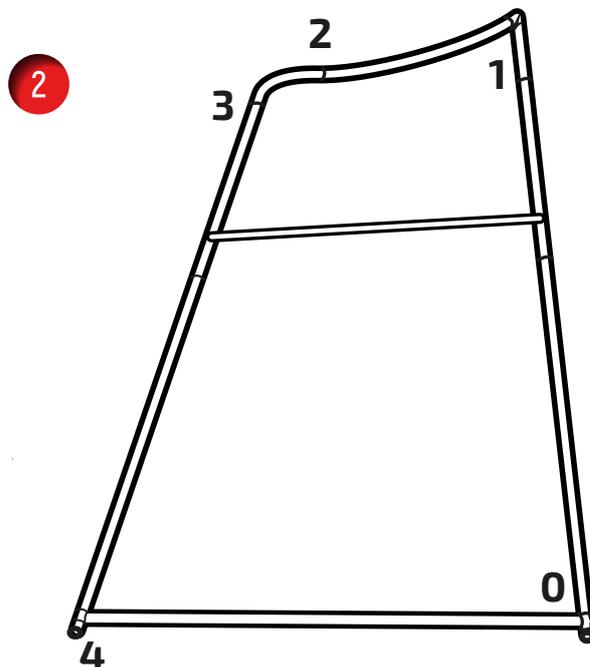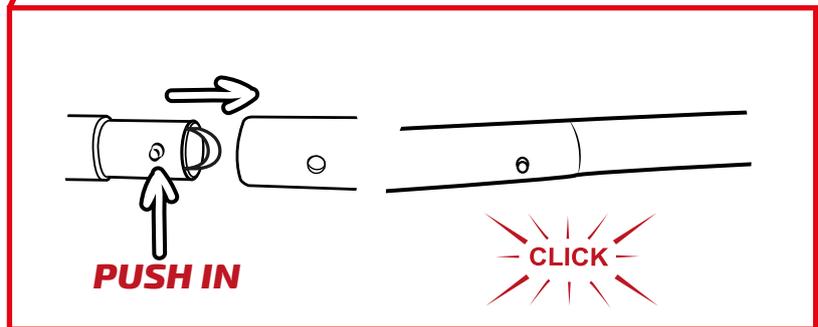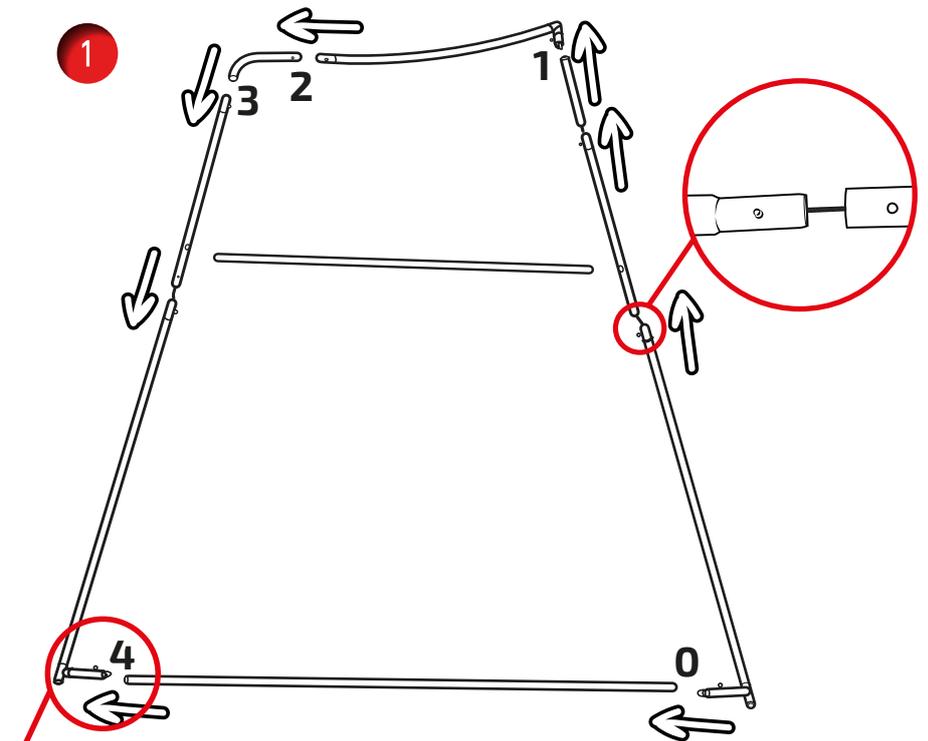

Modulate Sloped Frames Modulate 824 (Slope 1)

Aug 2018

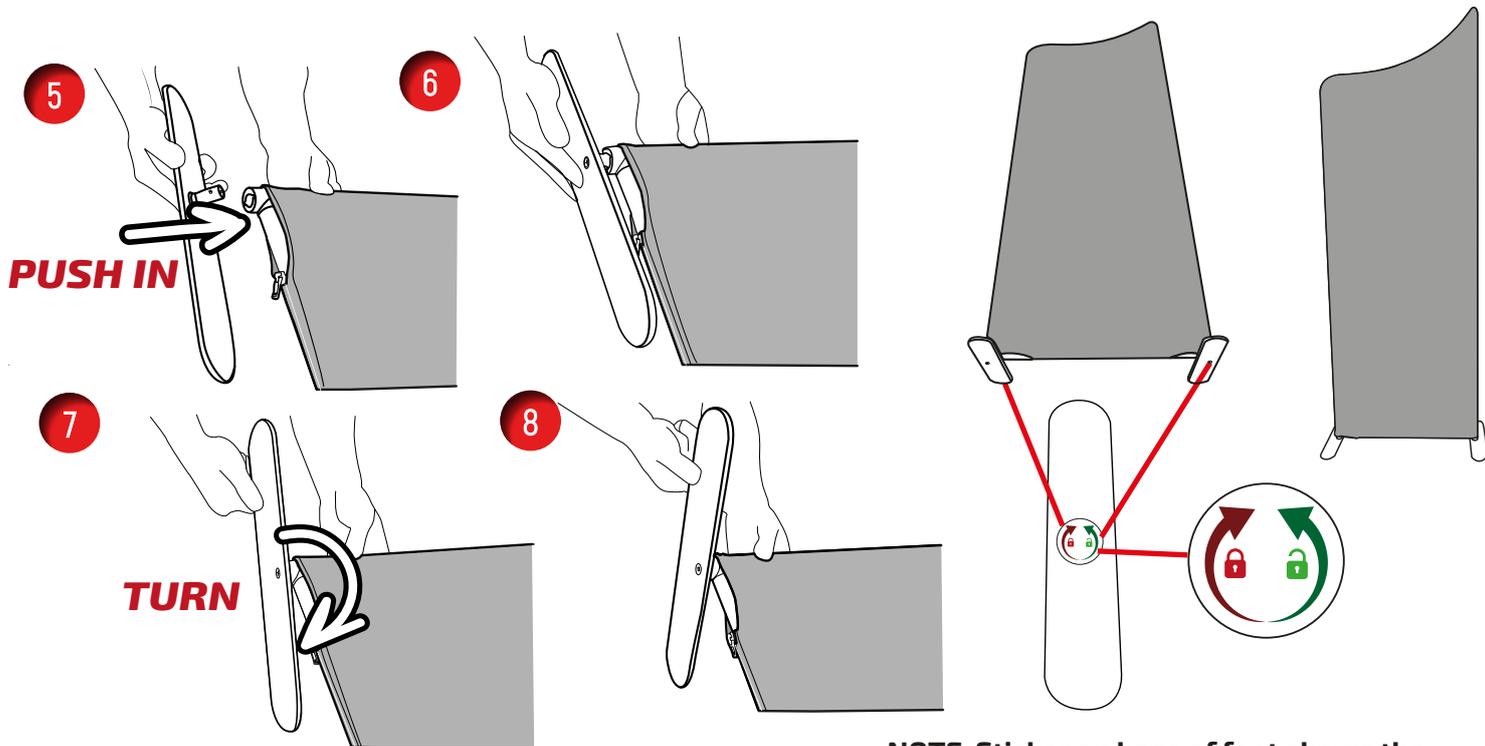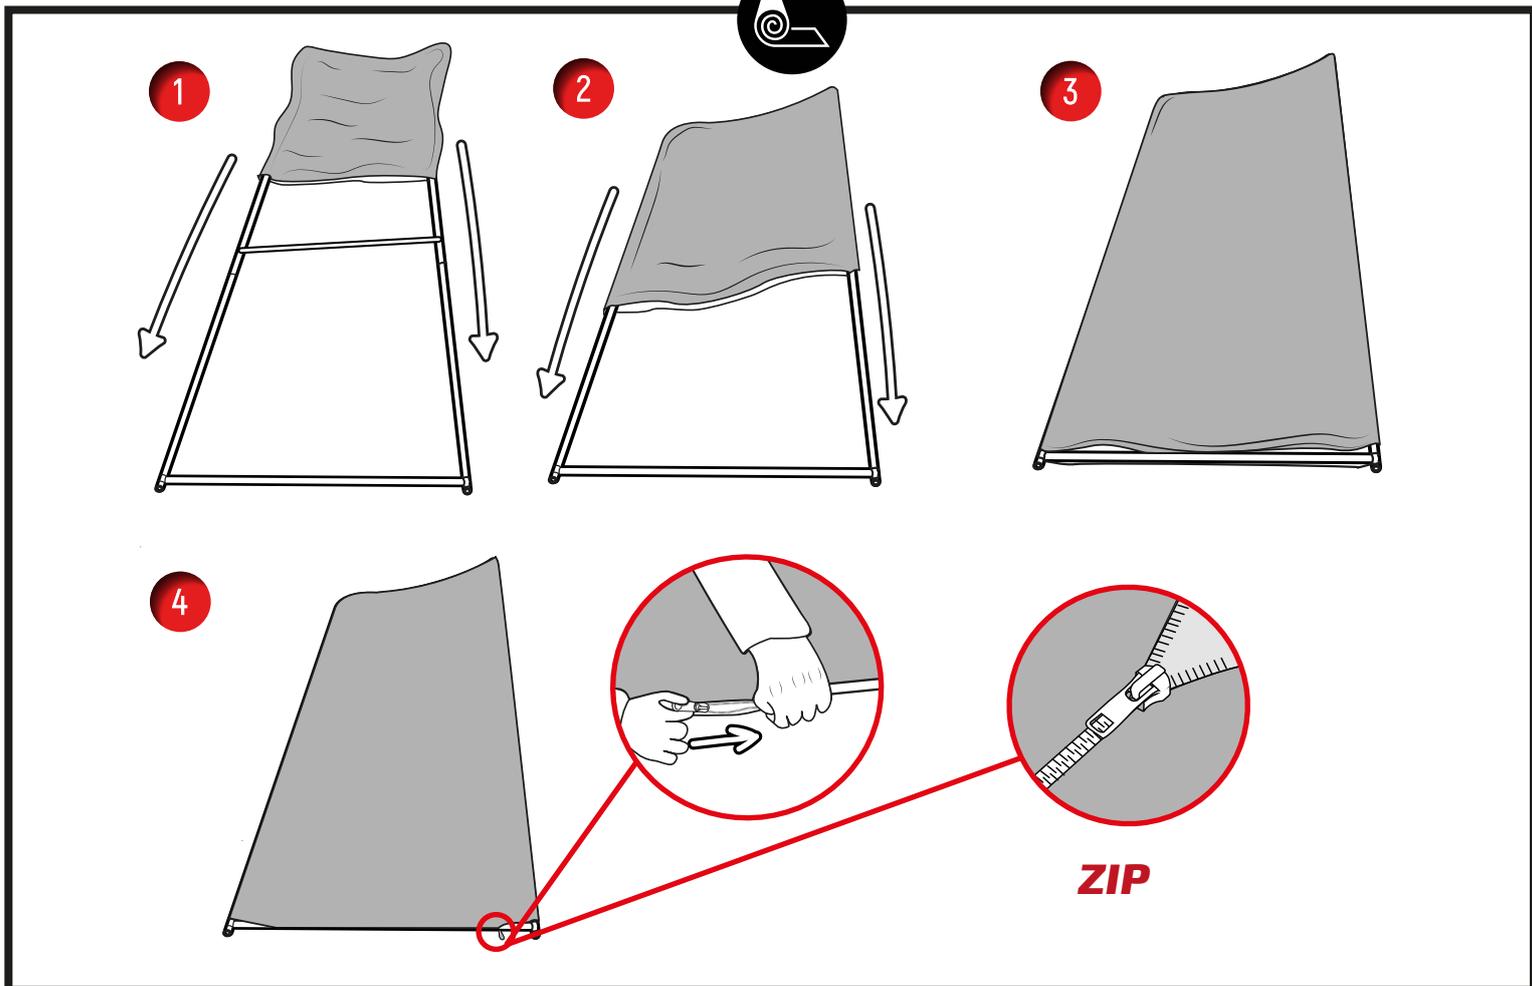

Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot





NOTE: Sticker on base of foot shows the directions for locking/unlocking foot

NOTE: TWO POSITIONS FOR THE FEET (SEE OPTION 1 FOR SECOND POSITION)






OPTIONAL (HALF FEET)

OPTION 1 NOTE: HALF FEET CAN BE POSITIONED ONTO THE FRAME TWO DIFFERENT WAYS

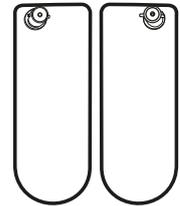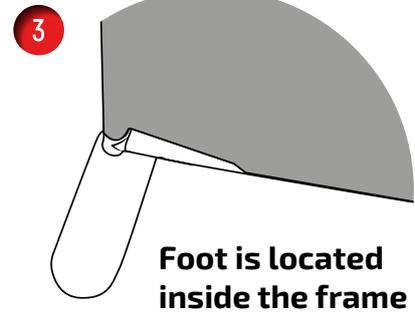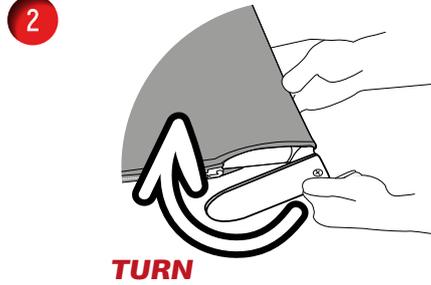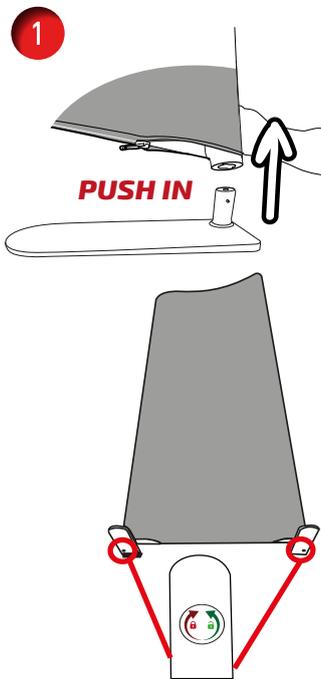


Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot

OPTION 2

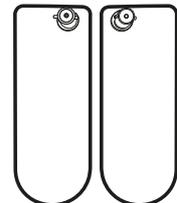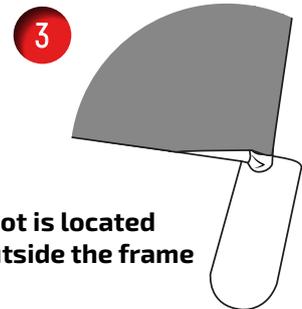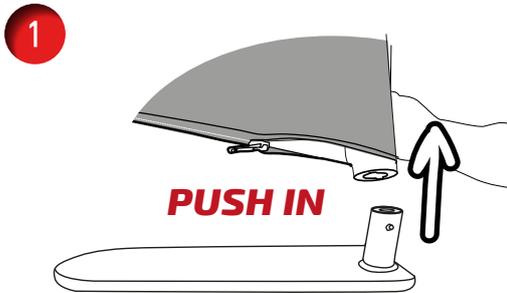


Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot

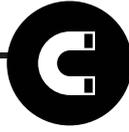

CONNECTING MULTIPLE FRAMES

NOTE: SECOND FRAME (420 STRAIGHT NOT INCLUDED)

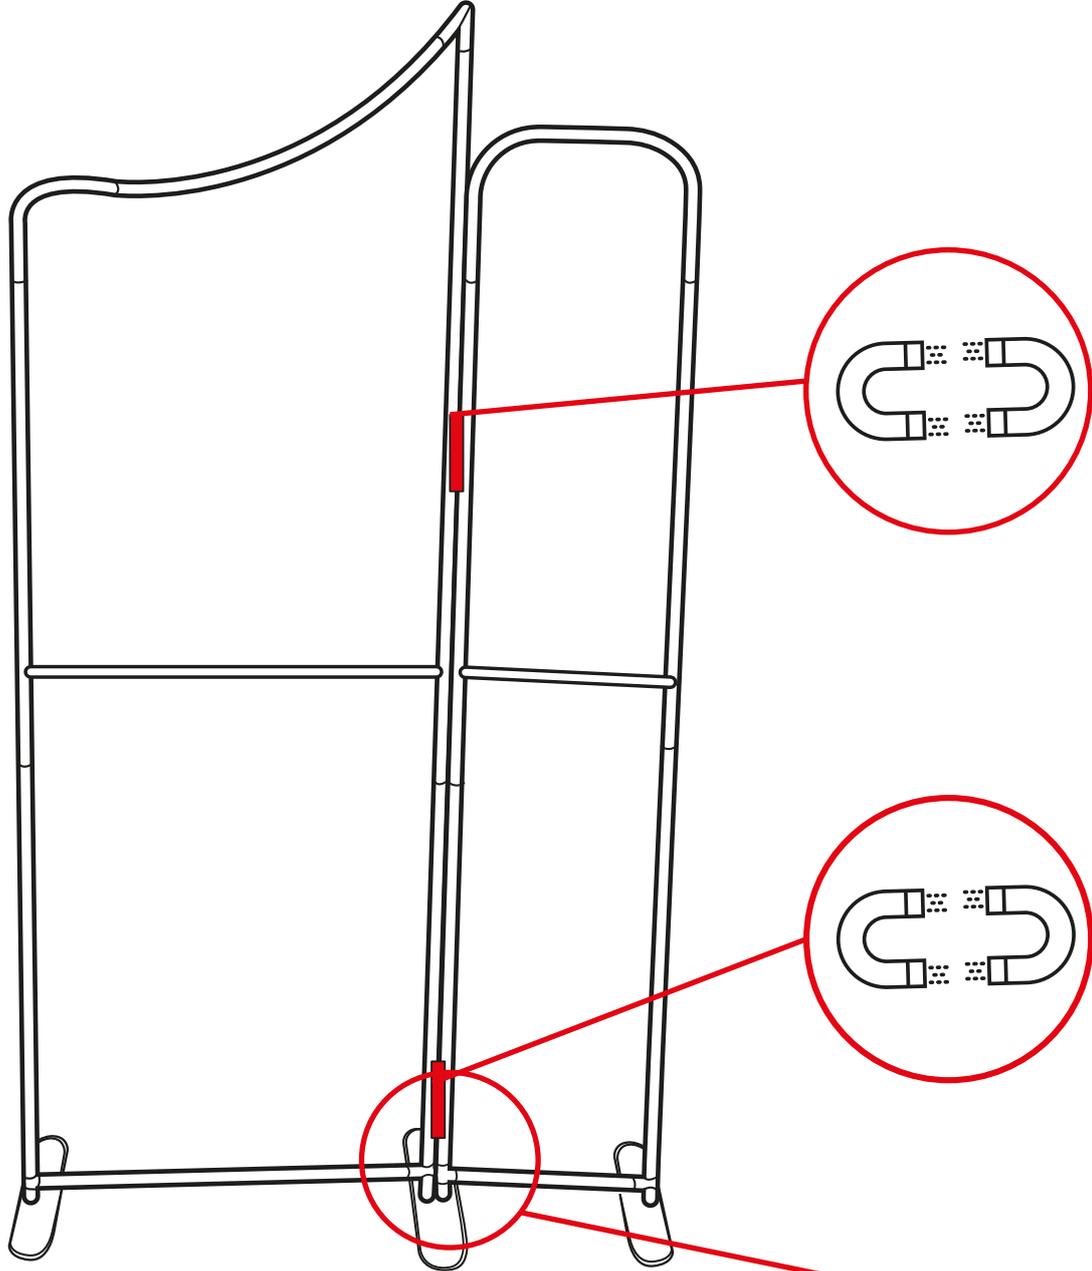

824 Slope 1 Frame and 420 Straight Frame

Remove one foot from second frame and align both frames on one foot

NOTE: FOLLOW OPTION 2 FOR HALF FEET TO CONNECT TWO FRAMES ON ONE FOOT

