



Tubez Assembly Instructions

- 1, Fit the base to the central wrap using hook fastener
- 2, Fit the top to the central wrap,
tip: partially unfasten the wrap, fit the top,
then refasten
- 3, Fit the cylindrical bases to both cylindrical wraps
- 4, Finally fit the cylindrical wraps to the top,
tip: partially unfasten each wrap, fit the top,
then refasten

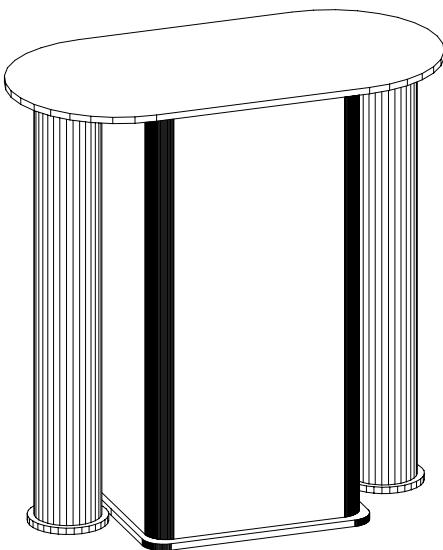

Assembled unit

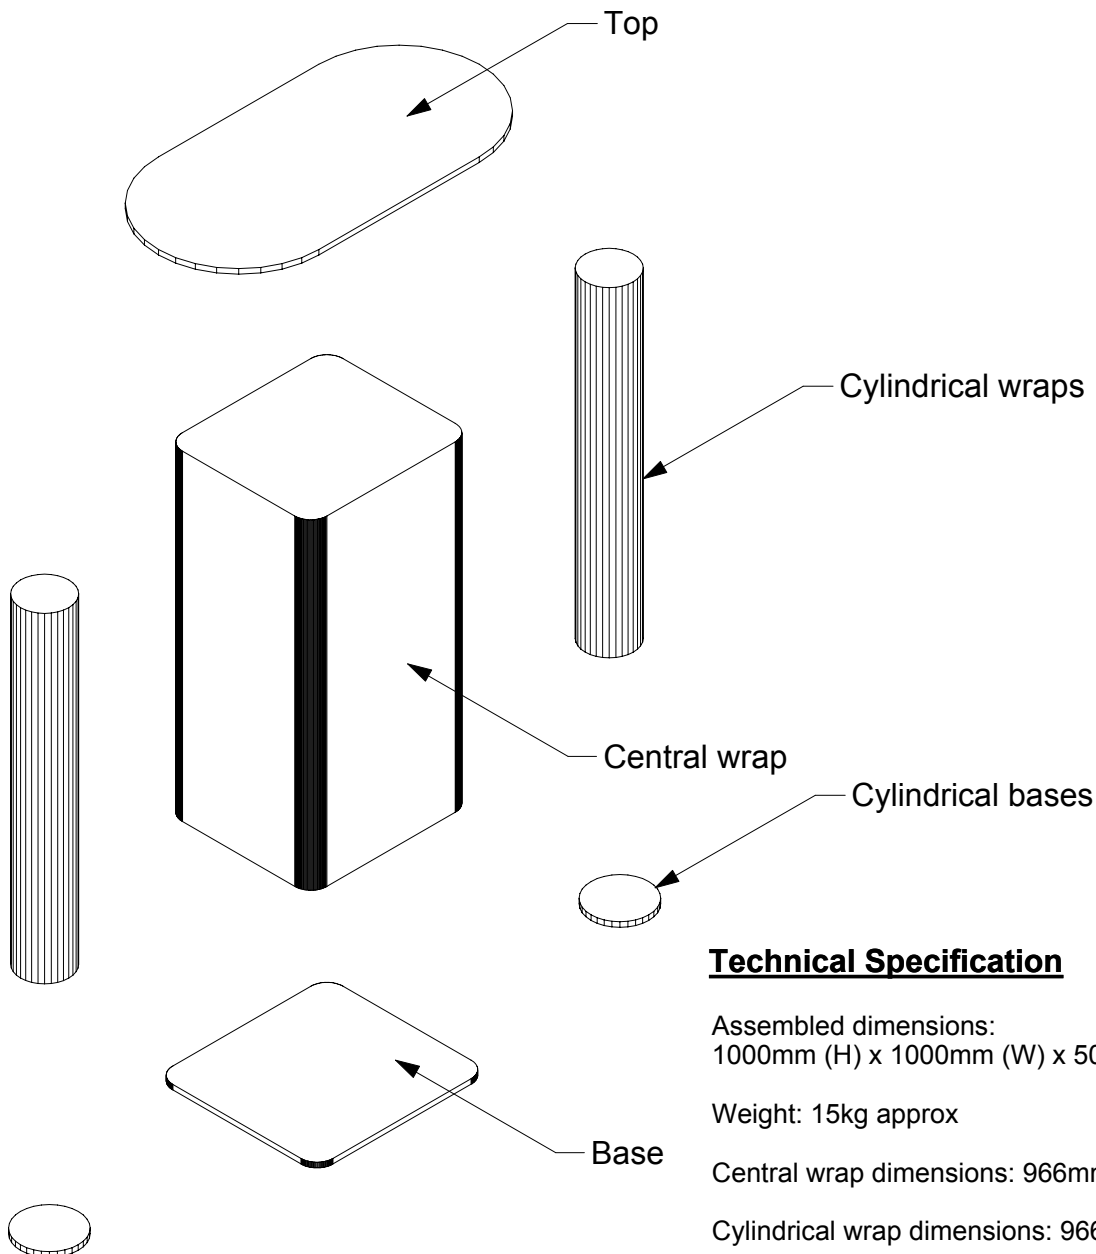

Technical Specification

Assembled dimensions:
1000mm (H) x 1000mm (W) x 500mm (D)

Weight: 15kg approx

Central wrap dimensions: 966mm (H) x 1900mm (W)

Cylindrical wrap dimensions: 966mm (H) x 430mm (W)