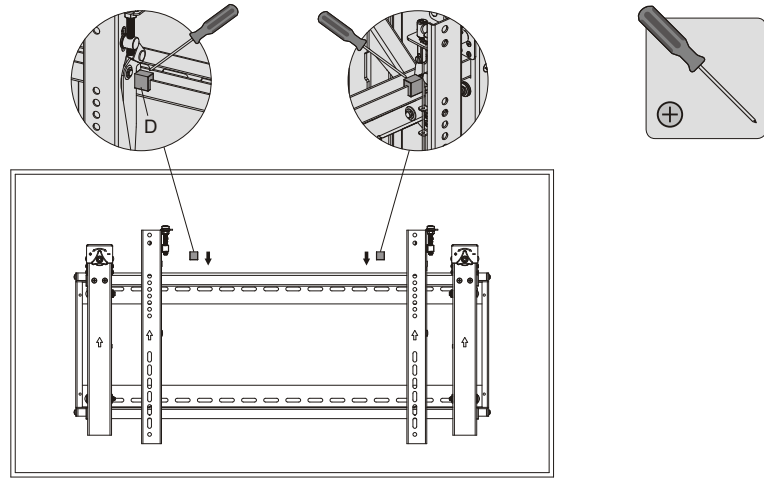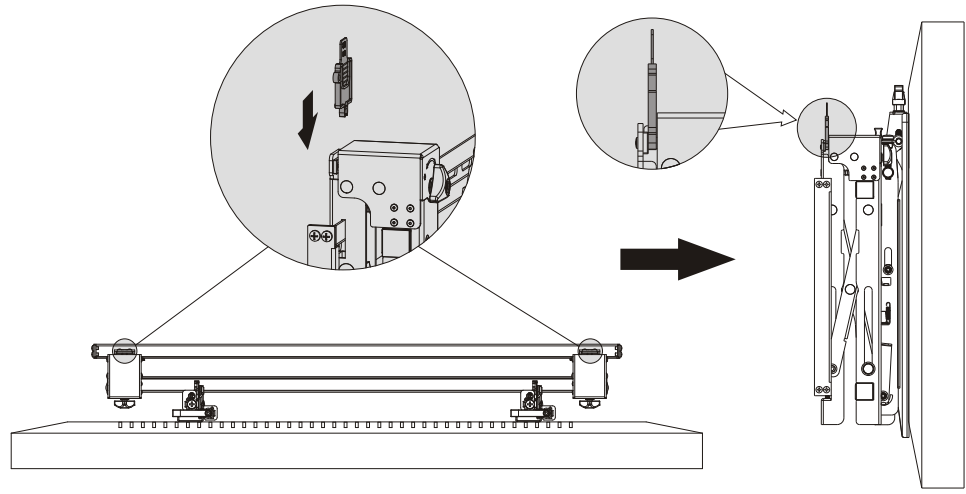# Video Wall Mount

## 8. Fixing the Brackets Position with the Antiskid Blocks



D

Install the both antiskid blocks as close to the adapter brackets as possible.
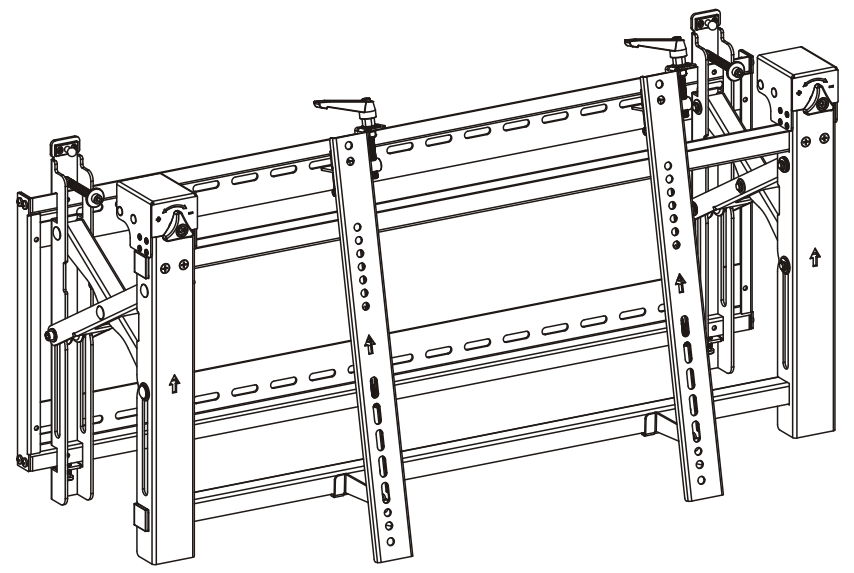Tighten screws on the antiskid blocks using a proper screwdriver to prevent display from moving.

## 9. Lock the Pop-out Module with the Plastic Locking Pieces



**Maintenance**
• Check that the bracket is secure and safe to use at regular intervals(at least every three months).
• Please contact your distributor if you have any questions.



**CAUTION:** DO NOT EXCEED RATED LISTED WEIGHT. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

| | VESA MOUNTING | | | |
|---|---|---|---|---|
| **AS0346T** | | 200x200/300x300 400x200/400x400 600x400 | **70"** MAX | **70kg (154lbs)** RATED |
| **AS0348T** | | 200x200/300x300 400x200/400x400 600x400/800x400 | | |

**ISSUED:** SEP. 2014

# ⚠ WARNING

• Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.

• This mounting bracket was designed to be installed and utilised ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.

• This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.

• Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

• Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.

• Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.

• This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

## Component Checklist

**IMPORTANT:** Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.
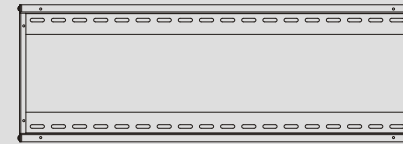
wall plate (x1)
A
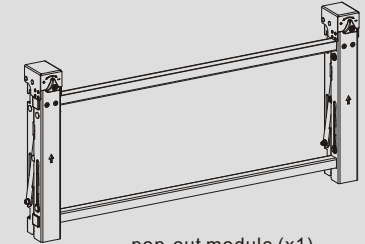
pop-out module (x1)
B

adapter bracket (x2)
C

antiskid block (x2)
D

plastic locking piece (x2)
E

**Package M**

M5x14 (x4)
M-A

M6x14 (x4)
M-B

M8x20 (x4)
M-C

M6x30 (x4)
M-D

M8x30 (x4)
M-E

washer (x4)
M-F

small spacer (x8)
M-G

big spacer (x4)
M-H

**Package W**
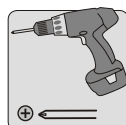
ST6.3x55 (x6)
W-A

concrete anchor (x6)
W-B

D6 washer (x6)
W-C

## 1. For Solid Brick and Concrete Wall Mounting

60mm
(2.4")

ø 10mm
(ø 3/8")

1
Mark the exact location of mounting holes
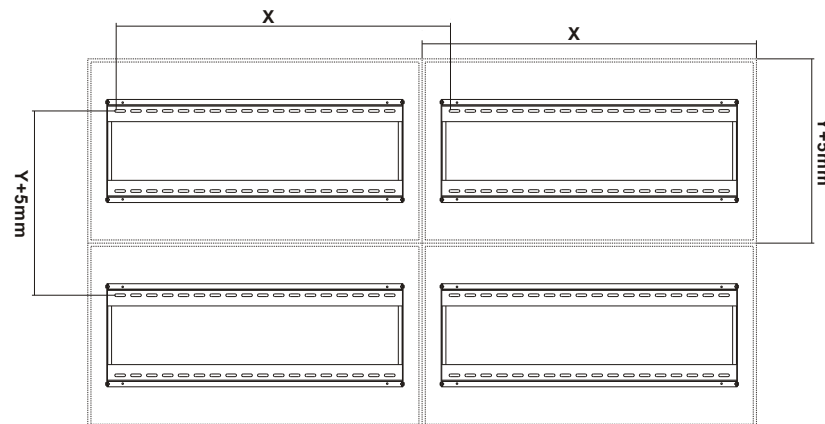
2
Drill pilot holes
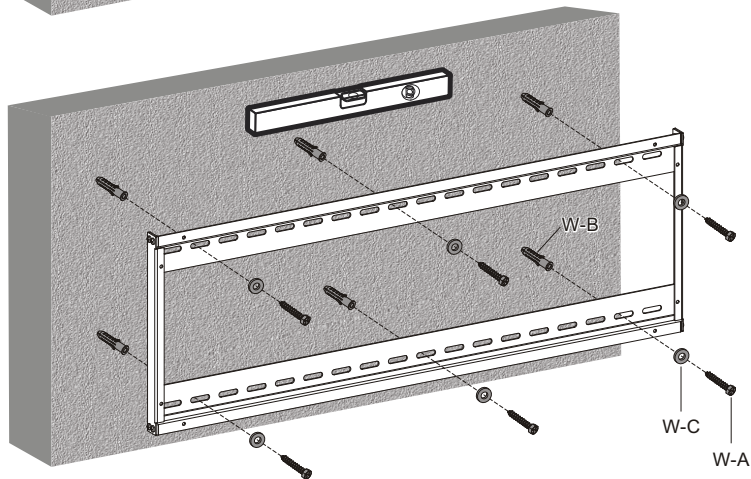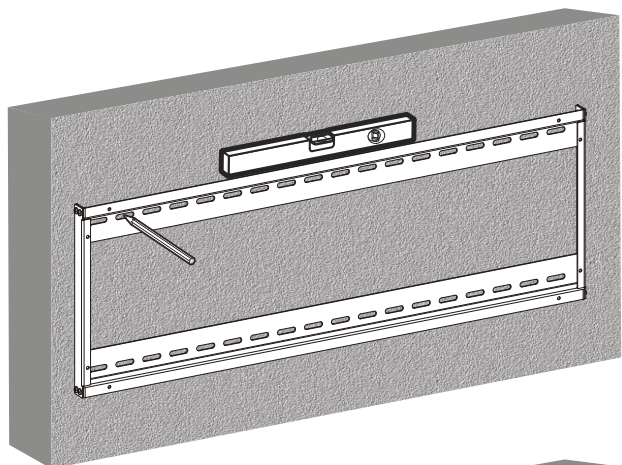
Screw the wall plate onto the wall
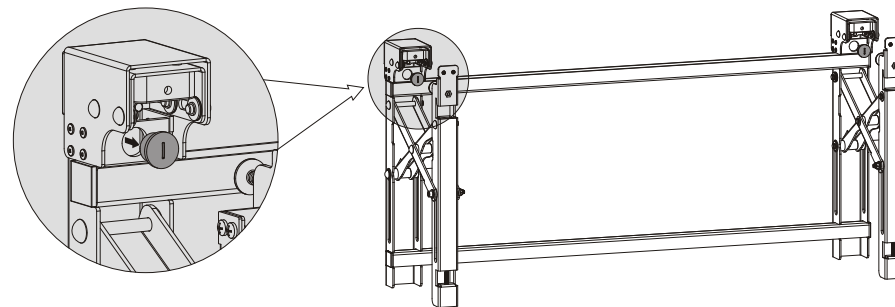
W-B

W-C

W-A

## ⚠ WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

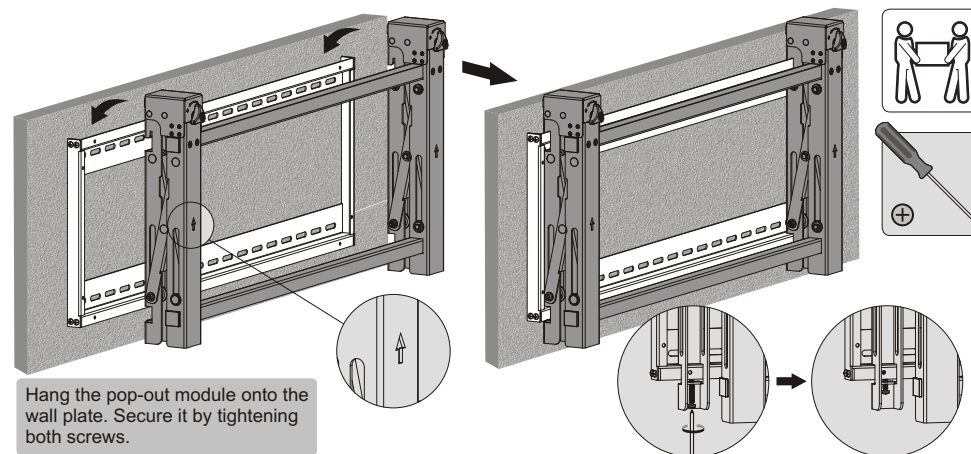## 2. For Video Wall Installation (Mounting space as shown below)

X=Length of display    Y=Height of display

X

X

Y+5mm

Y+5mm

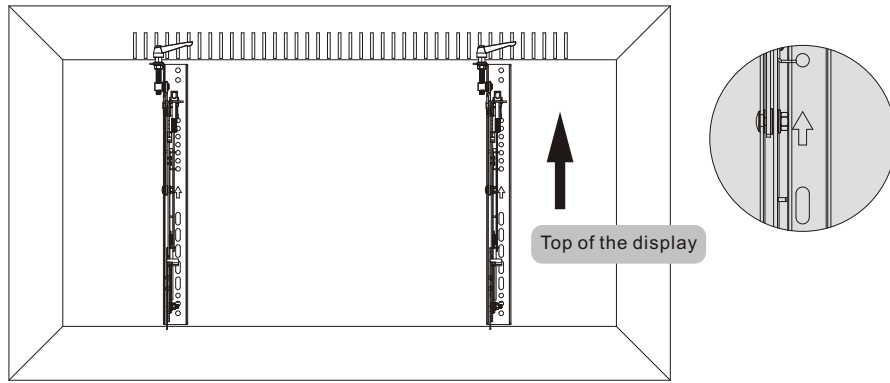## 3. Installing the Pop-out Module

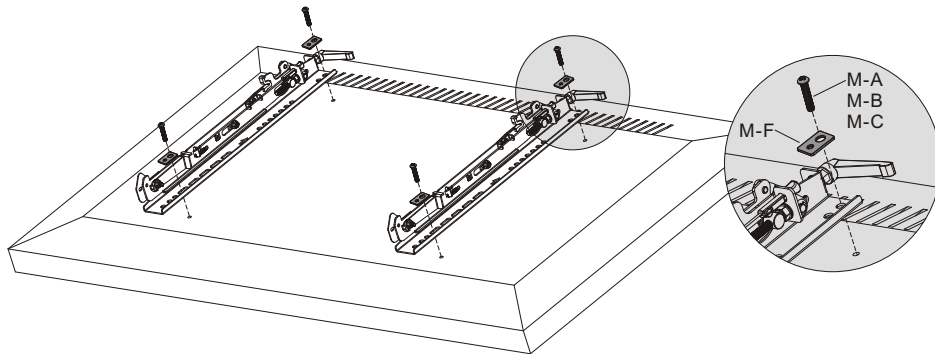Please take off the caps before installation.

Hang the pop-out module onto the wall plate. Secure it by tightening both screws.
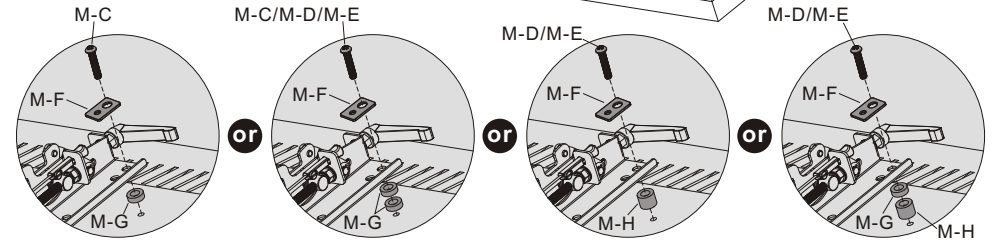
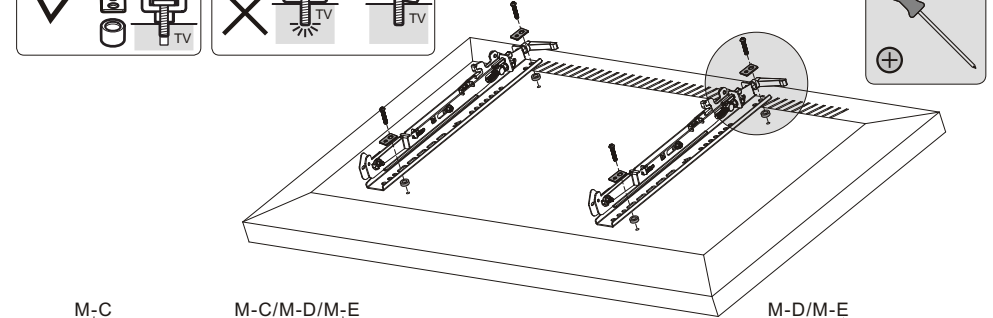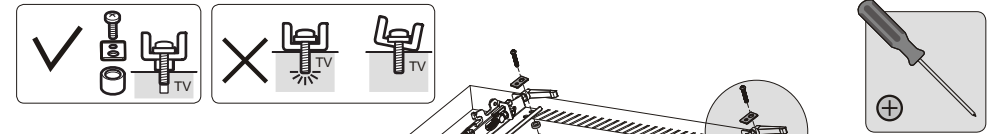## 4. Installing the Adapter Brackets

Top of the display

### 4-1 For Flat Back Screens

TV / TV / TV

M-A
M-B
M-C
M-F

### 4-2. For Bump-out or Recessed Back Screens

TV / TV / TV

M-C          M-C/M-D/M-E          M-D/M-E          M-D/M-E

M-F          M-F          M-F          M-F

or          or          or

M-G          M-G          M-G          M-G
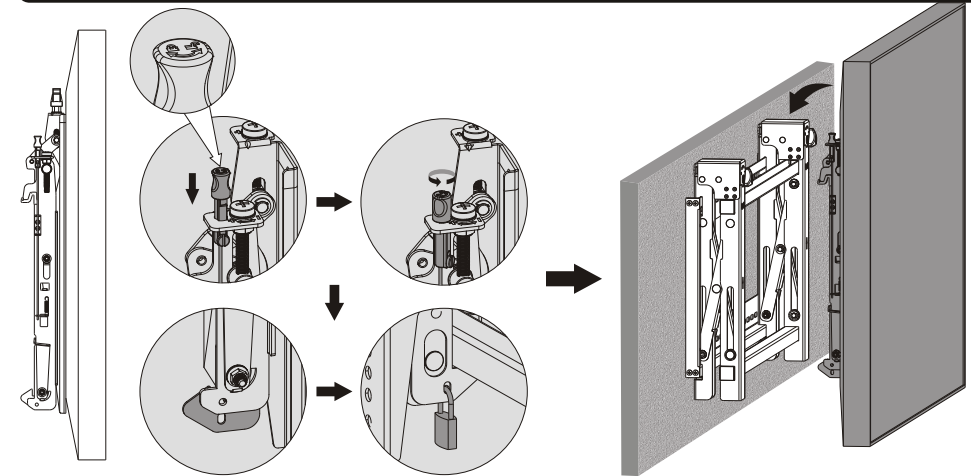                         M-H          M-H

**Note:** Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.
· Position the adapter brackets as close as possible to the center of the display.
· Screw the adapter brackets onto the display.
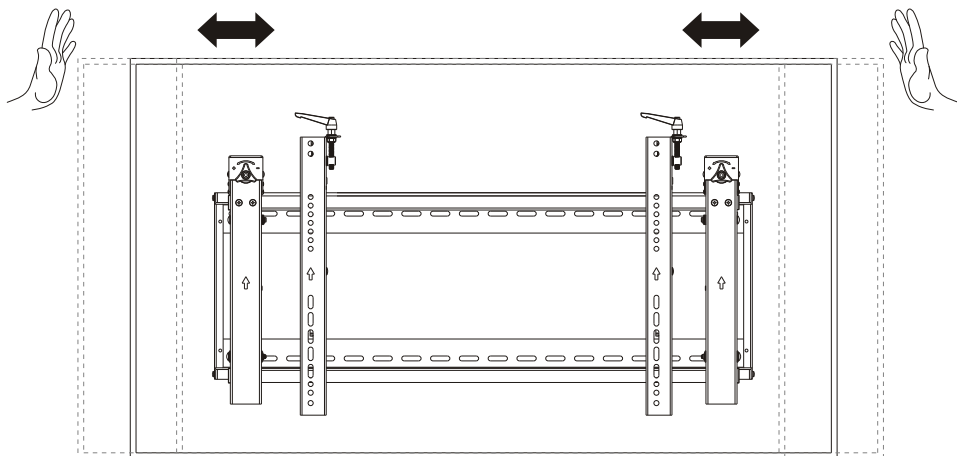
⚠ **Tighten all screws but do not over tighten.**
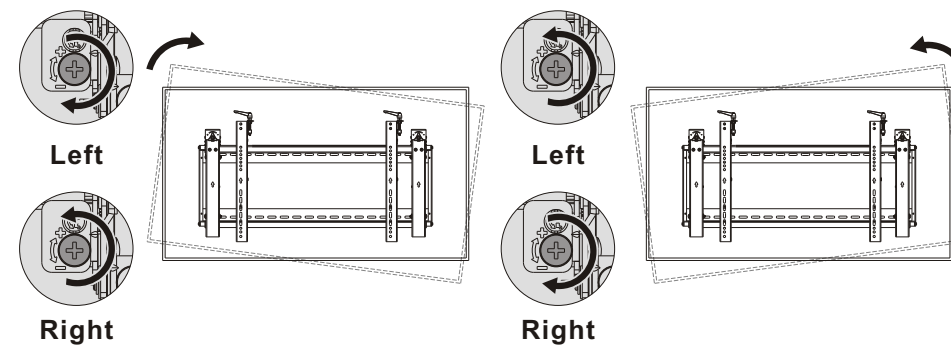
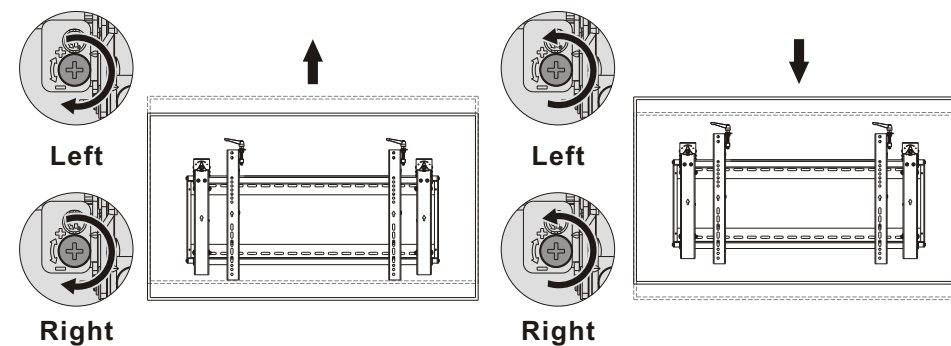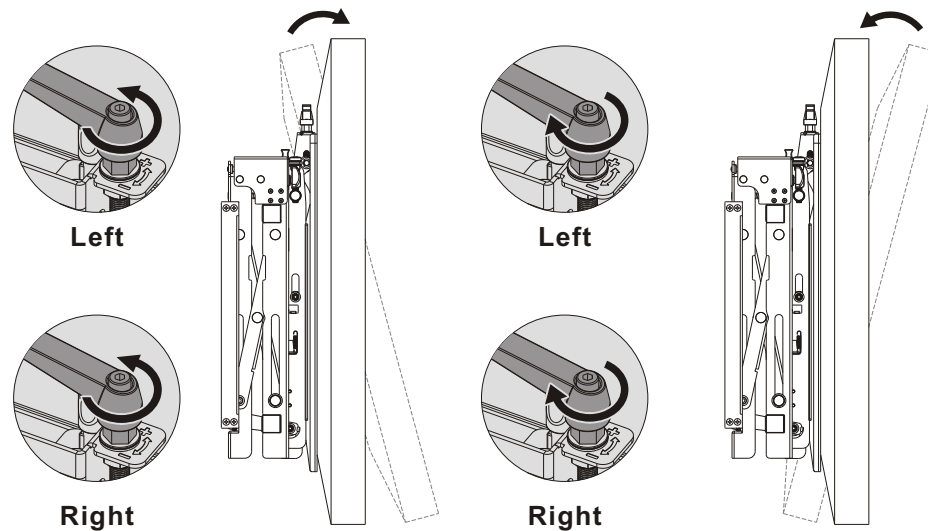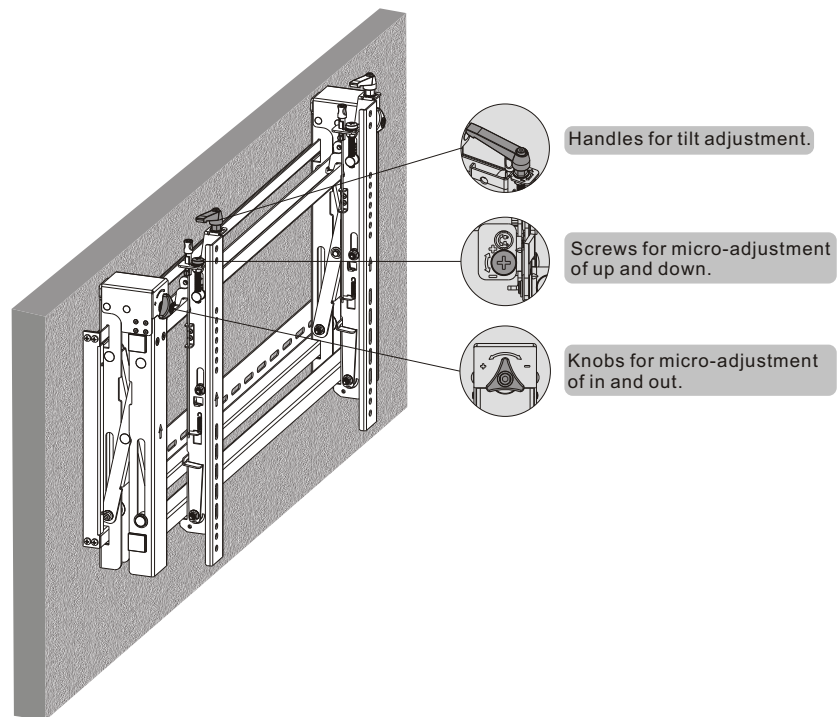## 5. Hooking the Display onto the Pop-out Module

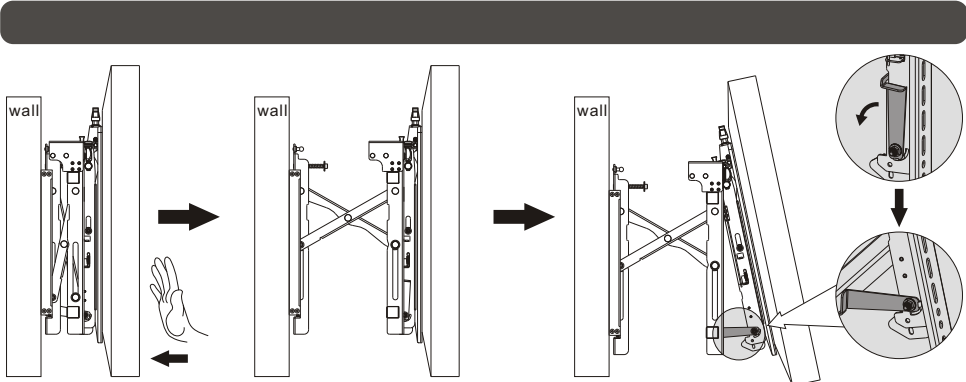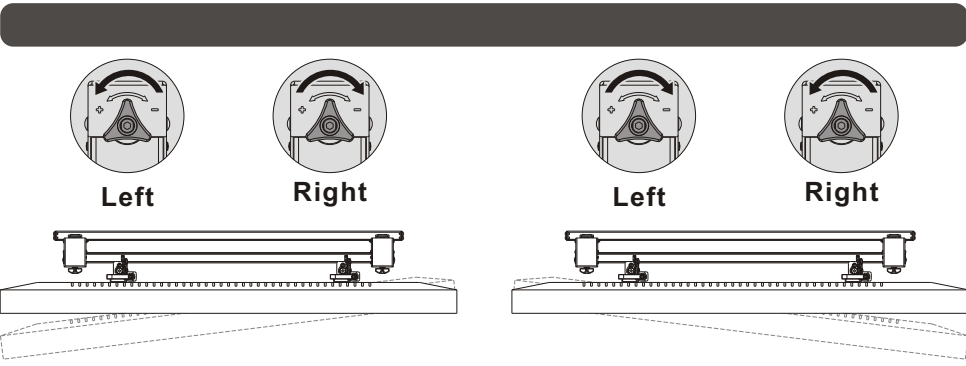**Note:** Before hooking the display, make sure the knobs are rotated to the unlock position.
· Lift the display carefully and hook the display onto the pop-out module. Rotate the knobs to the lock position to secure the display.
· Use the padlock to prevent the display from being stolen.( Padlock is not included)

## 6. Adjustment

Push the display to left or right to enable fast alignment.

Handles for tilt adjustment.

Screws for micro-adjustment of up and down.

Knobs for micro-adjustment of in and out.

Left

Left

Right

Right

Left

Left

Right

Right

Left

Left

Right

Right

**Left**

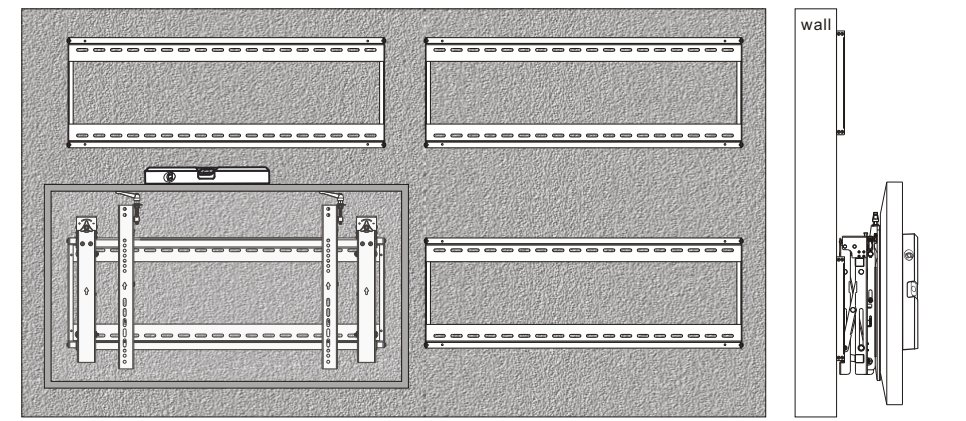**Right**

**Left**

**Right**

**Left**    **Right**        **Left**    **Right**
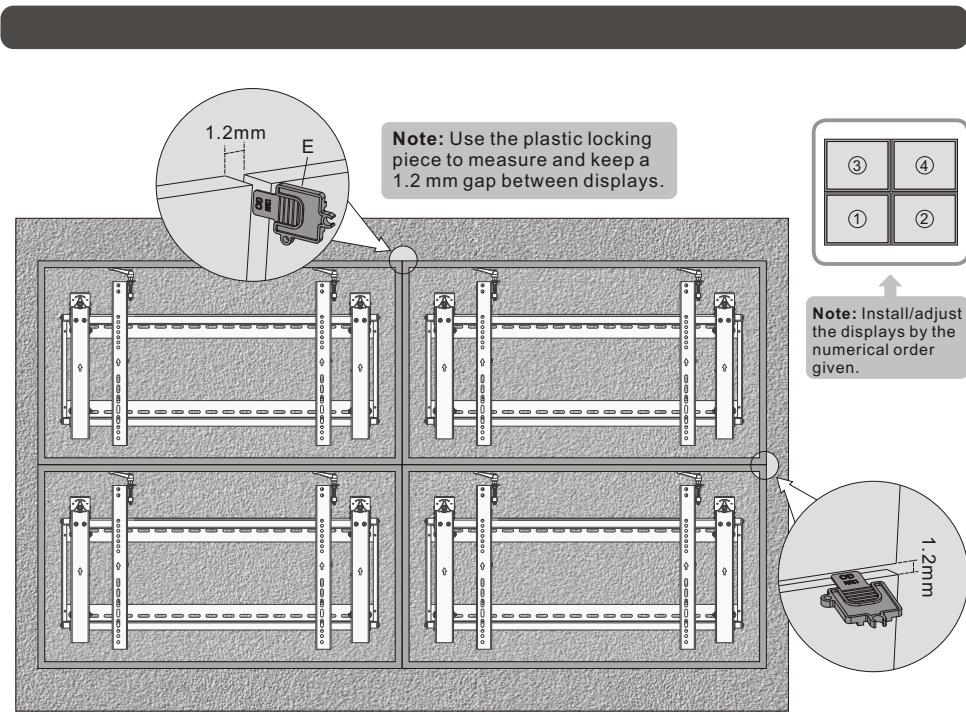
wall      wall      wall
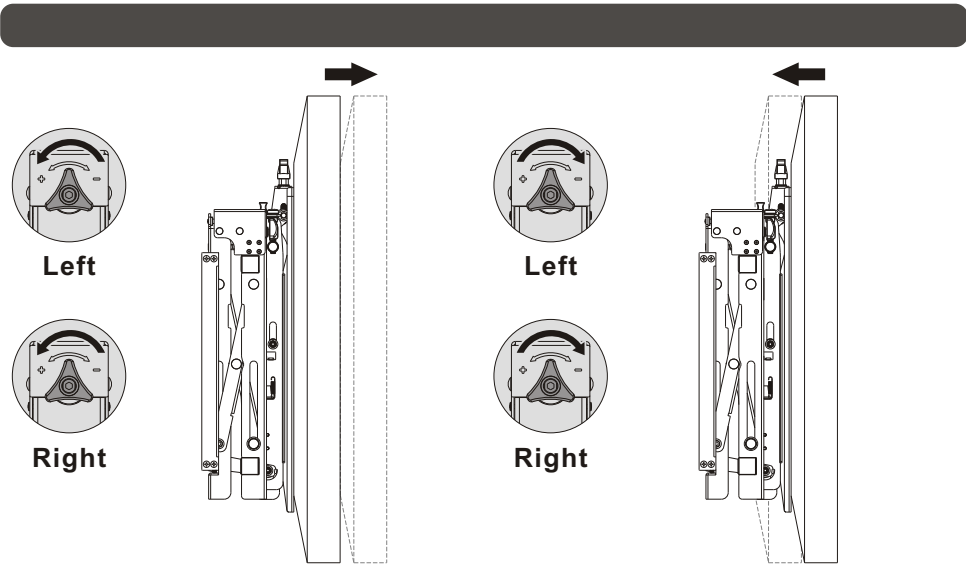
Push the display inward and then release it, the display will be pop-out.
Kickstands provide tilt access for easy cables management and maintenance.

## 7. Level the Displays

wall

Adjust the display to keep level in vertical and horizontal directions.

1.2mm    E

**Note:** Use the plastic locking piece to measure and keep a 1.2 mm gap between displays.

| ③ | ④ |
| ① | ② |

**Note:** Install/adjust the displays by the numerical order given.

1.2mm